

BULLETIN NUMBER:	SP8010-1405
DATE:	5/23/2014
PRODUCT LINE:	ACCU-STEAM GAS GRIDDLES
MODELS:	GGF & PGF GAS MODELS
SERIAL NUMBER:	ALL
SUBJECT:	OXIDATION PREVENTION DURING THE FIELD INSTALLATION OF THE IGNITION CONTROL MODULE (P/N: AT2E-1807-1) OR IGNITION MODULE CONNECTOR WIRE HARNESS (P/N: AT0A-2719-2 OR -3).

NOTICE: THIS DOCUMENT CONTAINS INFORMATION PROPRIETARY TO ACCUTEMP PRODUCTS, INC. AND IS TO BE USED ONLY BY AUTHORIZED SERVICE PERSONNEL. DUPLICATION OR REPRODUCTION OF THIS DOCUMENT IN ANY OTHER FORM, IN WHOLE OR IN-PART, IS STRICTLY PROHIBITED.

PURPOSE:

Applying dielectric compound to the Ignition Control Module pins and connector, repair installation, will help prevent oxidation forming on the module pins or the connector sockets. If the Ignition Control Module pins and connector become oxidized, it can cause a poor or loss of the Ignitor or Flame Sense signal voltage which can prevent the Accu-Steam gas griddle from operating correctly.

MATERIALS REQUIRED:


- Individual Packet of Dielectric Silicone Grease (P/N: AT0E-3540-3)
- Spray Electric Contact Cleaner

PROCEDURE:

With the Ignition Control Module or the Ignition Control Module Connector Harness installed...

1. Ensure that the Ignition Control Module Connector is disconnected from the Ignition Control Module pins.
(Fig: A)


FIG A

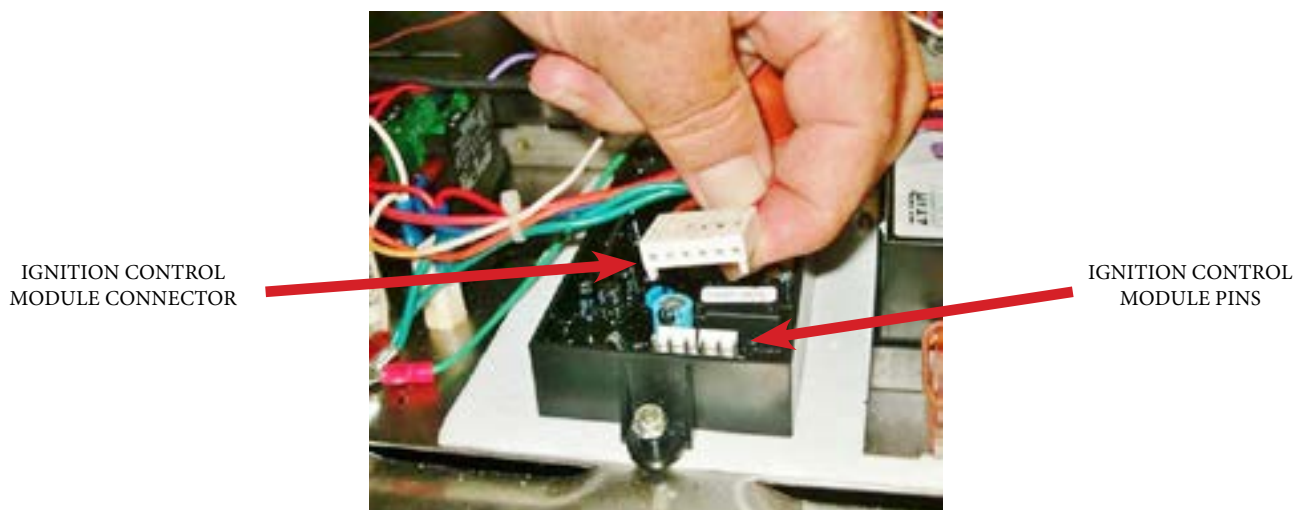

PROCEDURE (continued):


2. Inspect and remove any previous dielectric or debris from the existing Ignition Module pins or connector.
3. Using an electric contact cleaner (i.e. McMaster-Carr P/N: 7437K15), spray both the Ignition Control Module pins and the Ignition Control Module Connector Harness sockets. (Fig B & Fig C.)

FIG B

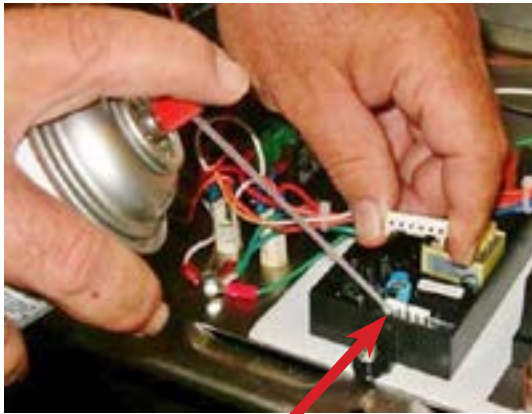

SPRAYING CONTACT
CLEANER ON PINS

FIG C

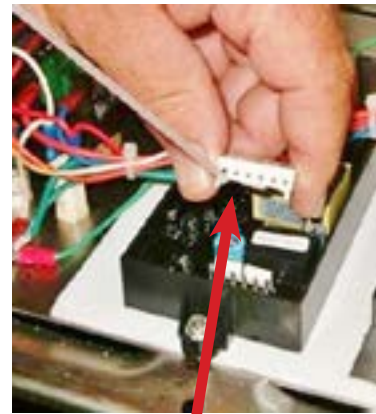

SPRAYING CONTACT CLEANER
ON CONTACTOR SOCKETS

4. Apply a generous amount of the dielectric compound (AccuTemp P/N: AT0E-3540-3) to the pins of the Ignition Control Module. (Fig D)
5. Once the dielectric compound is applied to the Ignition Control Module pins, then place the Ignition Control Module Connector on the pins and ensure that the connector is securely in place.
6. Return the Accu-Steam gas griddle to its ready operational state and test the griddle for proper operation.

FIG D



If the griddle does not operate correctly after this procedure, please contact AccuTemp Service Hotline.

ACCUTEMP TECHNICAL SERVICE INFORMATION:

Service Hotline Toll Free Phone: 800-480-0415

Service Email: service@accutemp.net Website: www.accutemp.net

Service Phone Techs are available Monday - Sunday from 7:00 am to 7:00 pm EST.